

Blade Exchange 95 32 060 / 100



1. Remove the conical pin from the handle. Use a hammer and a parallel pin punch.

Be careful! It is a conical pin. Check at first from which side you hammer!



Blade Exchange 95 32 060 / 100



Blade Exchange 95 32 060 / 100



Conical pin Form A 4 x 18 DIN 1



Blade Exchange 95 32 060 / 100



2. Remove the handle



Blade Exchange 95 32 060 / 100



3. Remove the conical bushing



3. Now you can remove the blade



Blade Exchange 95 32 060 / 100



Lubricate the tool with oil and grease

4. Assembling in reverse sequence



Tongue and groove principle



Blade Exchange 95 32 060 / 100




Blade Exchange 95 32 060 / 100




Check the position of the two holes



Blade Exchange 95 32 060 / 100

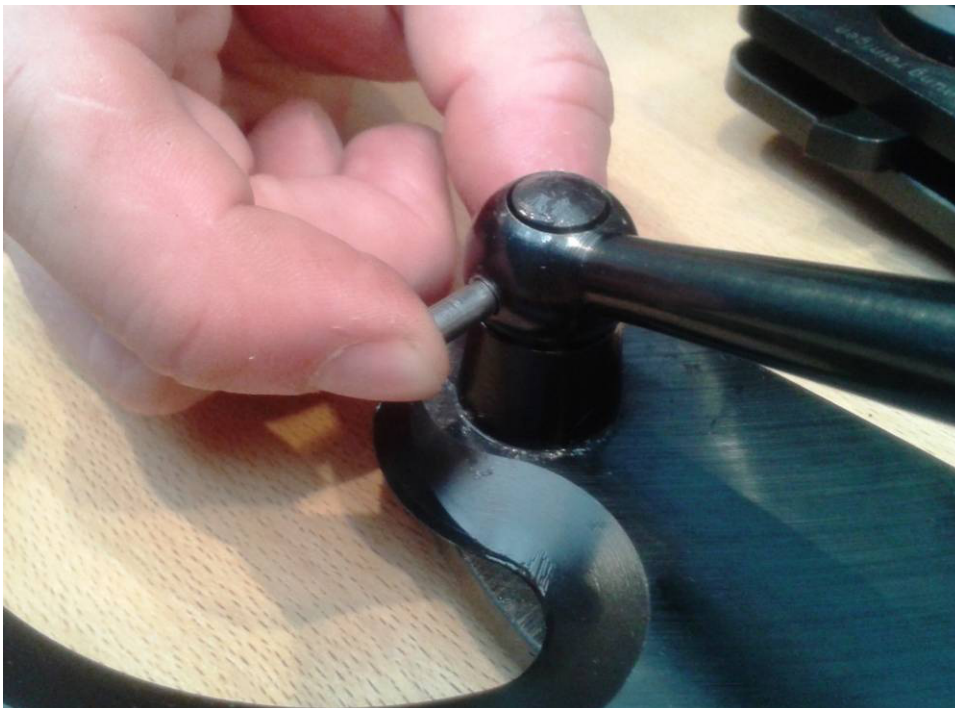

Blade Exchange 95 32 060 / 100

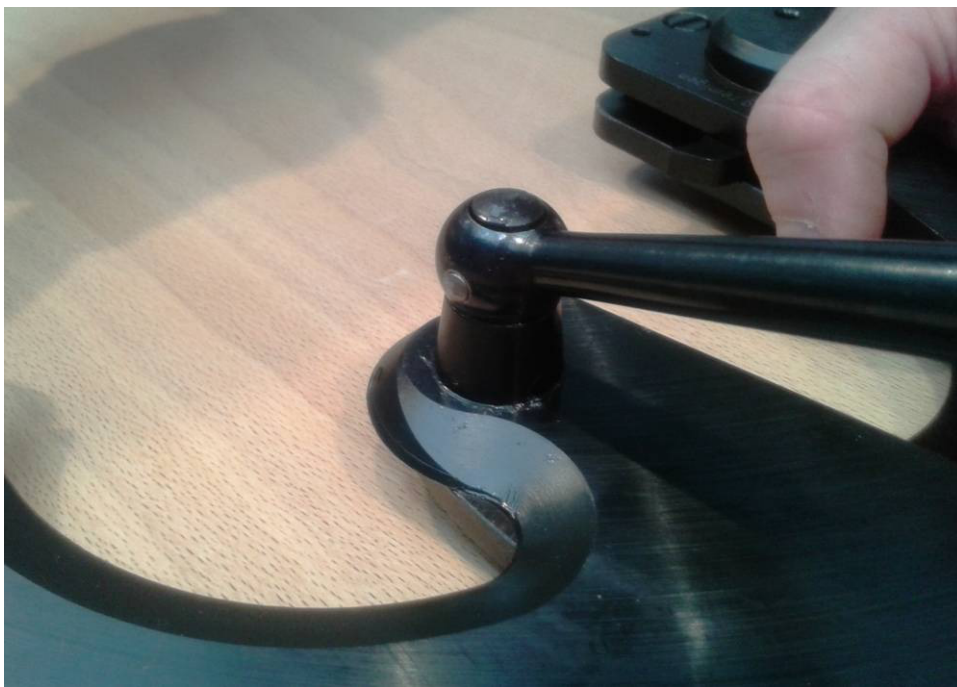

Ready!